

RemoteCam5-CST™ Installation Instructions

DATE: 08/15/17

PRELIMINARY

Thank you for choosing the Sound Control Technologies' RemoteCam5[™] camera integration kit! Included in each RC5-CST[™] kit will be:


 2 Power Supplies & cords (Currently all RemoteCam Kits utilize the WPS-12) to provide power for the RemoteCam5[™] electronics as well as the SpeakerTrack up to 300' from the head end. All the RemoteCam[™] kits use the same power supply. The power supply is AC 100- 240V~47-63HZ compliant. 	
 2 RemoteCam5[™] Head End Modules (RC5-HE) which each provide system power, Ethernet control & two HDMI video outputs to the codec. 	Reference Careful Exchange in 2014 Video Out Simple Cable Link RCB-HE* Mead End Simple Cable Link RCB-HE* Mead End Simple Cable Link Adde
 2 RemoteCam5[™] Camera Modules with PowerSniffer[™] (RC5-CE) that provide camera power, Ethernet Control and HDMI video input from the SpeakerTrack. 	ADD-UN-VY Part Des UP RC5-CE* Camera End Deve Saver Savera Savera Comera Savera Savera Source Comera End Deve Savera Savera Source Comera End Source Comera E
Documentation	
• Specific cables (P/N according to the following chart)	

Codec	Camera	SCT Kit	Cables
C40, C60, C90 & SX80	SpeakerTrack 60	RC5-CST™	2 x RCC-C001, 1 x RCC-C002 2 x RCC-H001, 1 x RCC-H016 PPC-006

To proceed with the installation, insure that you have installed Two CAT5e or CAT6 cables between the camera installation site and the codec installation site.

Minimum distance should be approximately 30'/9M.T

The cables **must** be wired for either UTP 568A or UTP 568B. Please use the following scheme.

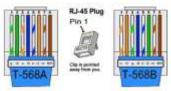

To install the RC5-CST[™] Kit, follow this step-by-step guide:

