



Poly Director II



Important: Due to the power demands of Poly's Director II, it is best practice to utilize SCT's provided **RC-RKM™** rack shelf to facilitate ventilation.


RCC-C030-0.4M
Mini-HDCI Y Cable to RJ45/HDMI

RCC-C016-0.3M
Audio Cable
(Far-end reference for auto-tracking)

PPC-015-0.4M
or **PPC-002**
Power Cable

SCTLink™ Cable Specs


Integrator-Supplied CAT5e/CAT6 STP/UTP Cable T568A or T568B (10m-100m min/max Length)

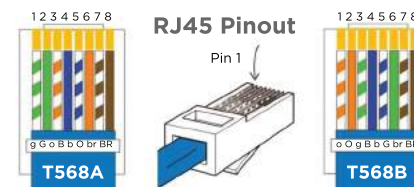

SCTLink™ Cable

Power, Control, Audio & Video
The **SCTLink™** cable must always be a single, point-to-point CAT cable with no couplers or interconnections.

RC7-CE™

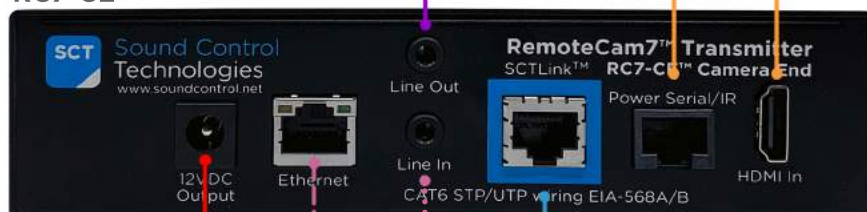

Optional

Optional 3rd Party Audio Input

WPS-48 48VDC
100-240V~47-63Hz
Power Supply

RC7-HE™



Optional

Optional 3rd Party Audio Output
(Please Note: Not a Loop Out)

3rd Party Device

RCC-H030-1.0M
HDCI Y Cable to HDMI/DB9

Poly Supplied
Audio Cable #2457-69476-001
3.5mm Adapter #1517-09350-001

Poly RPG300, RPG500, RPG700 & RPG7500

Module Dimensions

RC7-CE™: H: 1.6" (40mm) x W: 6.48" (164mm) x D: 4.55" (115mm)

RC7-HE™: H: 1.6" (40mm) x W: 8.65" (219mm) x D: 4.55" (115mm)



TEST YOUR SCTLink™ CABLE

We highly recommend using an Ethernet Network Tester/Analyzer alongside our provided PowerSniffer to confirm your SCTLink™ wiring. Our PowerSniffer only tests conductor continuity and will not identify data integrity or capacity issues.

1. Test and verify your CAT5e/CAT6 STP or UTP SCTLink™ cable for T568A or T568B. The SCTLink™ cable must be between 10m (minimum) and 100m (maximum) length.
2. Connect one end of the SCTLink™ cable to the "SCTLink™" connection on the Head End module.
3. Connect the other end of your SCTLink™ cable to the provided PowerSniffer.
4. Connect the WPS-48 power supply to the Head End module.
5. Connect the WPS-48 power supply to AC mains.
6. If the SCTLink™ cable is properly terminated, it will display eight GREEN LEDs. If you get any other result, **stop and re-terminate cable**.
7. Once your SCTLink™ cable has been tested, please disconnect the WPS-48 power supply from the RC7-HE module, and the PowerSniffer from the SCTLink™ cable, before proceeding to install.

INSTALL THE EXTENSION KIT

Before integrating your RC7-PD2™ extension kit, please ensure your Poly EagleEye Director II base is connected to your two EagleEyeIV cameras (Power and Ethernet connections) via Poly's instructions.

Connect the camera-end cables:

1. Connect the RCC-C030 mini-HDCI end to the mini-HDCI input on the EagleEye Director II base.
 - Connect the RCC-C030 HDMI leg cable to the RC7-CE's HDMI "HDMI In" port.
 - Connect the RJ45 leg cable to the RC7-CE's "Power Serial/IR" port.
2. Connect the RCC-C016 1' Audio Cable between the RC7-CE "Line Out" port and the EagleEye Director II's audio TRS input.
3. Connect the PPC-015 Power Cable between the EagleEye Director II's power input and the RC7-CE's power input, labeled "+12VDC Output".

Connect the codec-end cables:

4. Connect the RCC-H030's HDCI end to the primary HDCI input on the Group Series codec.
 - Connect the HDMI leg cable to the RC7-HE's HDMI "Output 1" port.
 - Connect the 9Pin leg cable to the RC7-HE's port labeled "Serial/IR".
5. Connect the Polycom supplied audio cable between the RC7-HE's "Line In" port and the Group Series Codec's audio outputs.

Connect and Initiate the Extended System:

6. Connect one end of your CAT6 SCTLink™ cable to the RC7-HE module's "SCTLink™" port. Connect the other end to the RC7-CE module's "SCTLink™" port.
7. Connect the WPS-48 Power Supply to the RC7-HE.

• ALLOW UP TO TWO MINUTES FOR THE EAGLEEYE DIRECTOR II SYSTEM TO INITIALIZE •

Installation Status - Refer to our modules' LEDs for installation status.

For assistance troubleshooting INACTIVE LED statuses, please contact Tech Support at 203-854-5701.

MODULE	LED LABEL	ACTIVE STATUS	INACTIVE STATUS
RC7-CE	OK LED	Blinking Green (~1 second interval)	Blinking or Solid Red
RC7-HE	OK LED	Blinking Green (~1 second interval)	Blinking or Solid Red
RC7-HE	LINK LED	Solid Green	Solid Red or Dormant

Cable Table - Part numbers, descriptions and functions of all provided SCT cables.
This kit includes **[1] RC-RKM™ Rack Shelf**.

CABLE	DESCRIPTION	FUNCTION
RCC-C030-0.4M	HDMI/RJ45 to Mini-HDCI Cable	Video/control connection between Director II base and RC7-CE Module.
RCC-C016-0.3M	Audio Cable	Audio connection between Director II base and RC7-CE module.
PPC-015-0.4M/PPC-002	Power Cable	Supplies power from RC7-CE module to the Director II base.
RCC-H030-1.0M	HDMI/ DB9 to HDCI	Video/control connection between RPG Series Codec and RC7-HE module.

Power Supply Specifications (AC-Mains Side): Input Voltage: 100VAC to 240VAC 47Hz to 63Hz. Efficiency: 85% minimum. Turn-on Surge: Less than 60 amperes for a duration less than 1mS. Power Factor: 0.9 minimum (where applicable). 48VDC power supply uses 2.80 amperes AC maximum. All specifications subject to change without notice.